INSTALLATION GUIDE

Everything you wanted to know but were too afraid to ask

andro.

think. again.



lence

MAKING LIGHT WORK

+61 3 9486 3699 sales@ambiencelighting.com.au **ambiencelighting.com.au**




Cut a hole in the ceiling as per the nominated cut-out sizes:

- XS Ø90mm
- S Ø98mm
- M Ø115mm
- L Ø128mm






Remove the secondary ring by rotating it anti-clockwise and pulling it out.

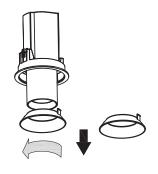



Push the housing in the hole.

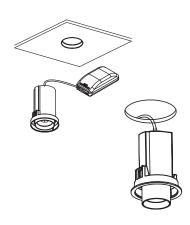

4 A

Fix the screws onto the ceiling using a screw driver.





Tighten the screws until the flanges on the housing are retracted and the housing is held tight in its position.



Fix the secondary ring back onto the housing by rotating it clockwise and pushing it in.




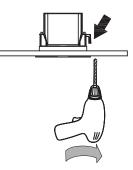

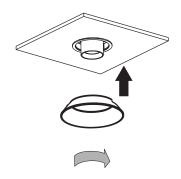

6

Turn ON power supply to complete installation.

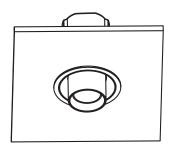



Now repurpose your **andro** packaging to plant some seedlings.

