INSTALLATION GUIDE

Everything you wanted to know but were too afraid to ask

andro.

think. again.

ANDRO TRIMLESS











P20 RoHS





WHOA, HOLD IT!

- 1 To avoid non-replaceable damage of custom-painted fittings, the secondary ring must be removed before adjusting the inner tube.

 The inner tube must be adjusted at ground level before ceiling installation.
- 2 Hit the off switch on any power before install.
- 3 Install must only be carried out by someone suitably qualified.
- Only use the product at the specified voltage and frequency.
- It would be sweet if you \$\frac{1}{2}\$ the packaging.
- 6 Read Step 1 again. Thx.






Cut a hole in the ceiling as per the nominated cut-out sizes:

XS Ø95mm S Ø105mm M Ø122mm L Ø136mm






Fix the Trimless frame on the ceiling using a screw driver.

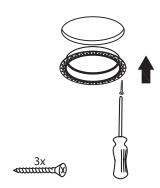



Plaster onto the Trimless frame to obtain a neat cut-out.

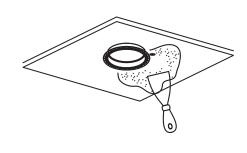




Once it's nice and flush, get a little Picasso over the plaster.





Remove the secondary ring by rotating it anti-clockwise and pulling it out.



Position driver in the ceiling space.

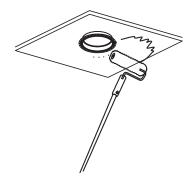

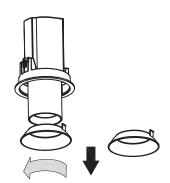

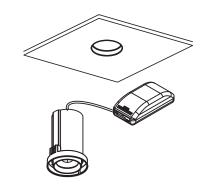

6 B


Push the housing in the hole.





Fix the screws onto the ceiling using a screw driver.



Tighten the screws until the flanges on the housing are retracted and the housing is held tight in its position.

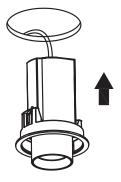

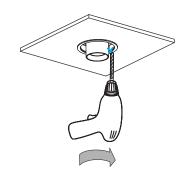

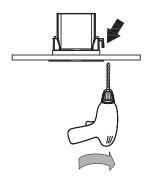

ANDRO TRIMLESS INSTALL STEPS



Fix the secondary ring back onto the housing by rotating it clockwise and pushing it in.



Turn ON power supply to complete installation.



Now repurpose your **andro** packaging to store tech cords.

