#### INSTALLATION GUIDE

Everything you wanted to know but were too afraid to ask

# flux


move it

#### FLUX SQUARE DOWNLIGHT

lence

MAKING LIGHT WORK

am

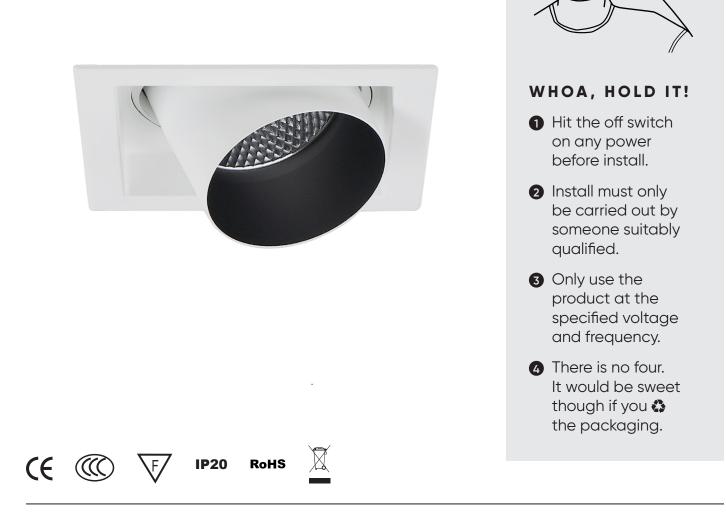


+61 3 9486 3699 sales@ambiencelighting.com.au **ambiencelighting.com.au** 

## 0

Make holes in the fall ceiling as per nominated sizes:

- XS: 100mm x 100mm
- S: 130mm x 130mm

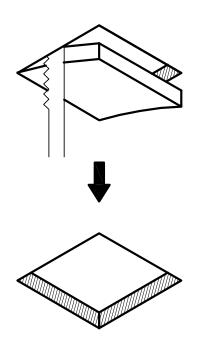


### 3

Push the housing into the hole by compressing the spring clips, just like that.



Position and plug LED driver in ceiling space, like this.

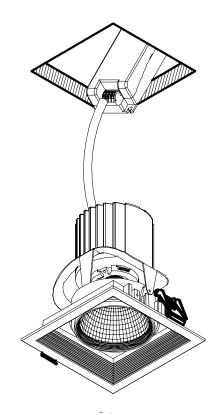



Release the spring clips once the fitting fits into the hole and adjust to the required angle, and that's that.

