INSTALLATION GUIDE

Everything you wanted to know but were too afraid to ask

flux


move it

FLUX TWIN DOWNLIGHT

am

ence

MAKING LIGHT WORK

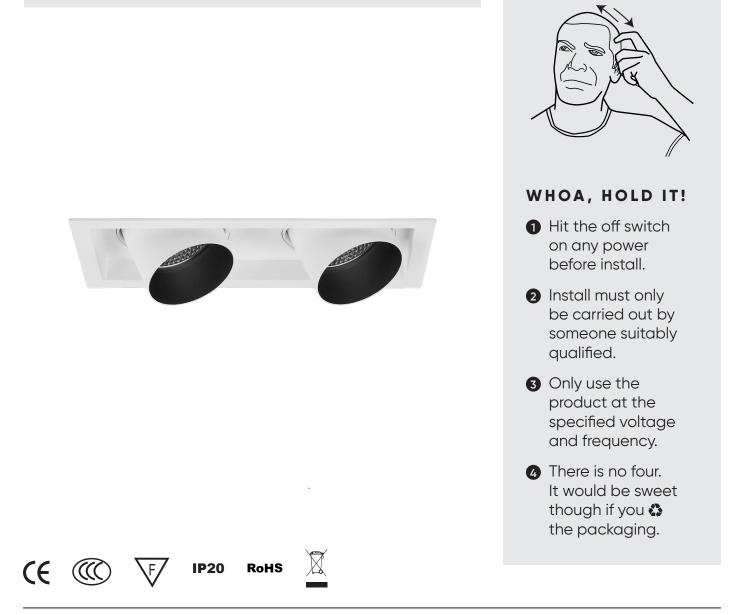


+61 3 9486 3699 sales@ambiencelighting.com.au **ambiencelighting.com.au**

1


Make holes in the fall ceiling as per nominated sizes:

- XS: 208mm x 100mm
- S: 285mm x 130mm

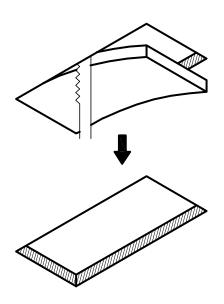

2

Position and plug LED driver in ceiling space, like this.

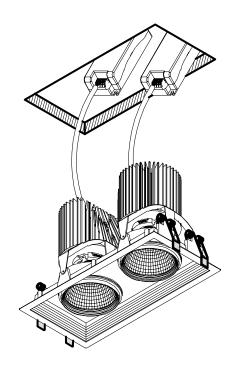

3

Push the housing into the hole by compressing the spring clips, just like that.



Release the spring clips once the fitting fits into the hole and adjust to the required angle, and that's that.

