#### INSTALLATION GUIDE

Everything you wanted to know but were too afraid to ask


olio

# limitless luminaires in one light

#### **OLIO ROUND TRIMLESS**

ence

MAKING LIGHT WORK

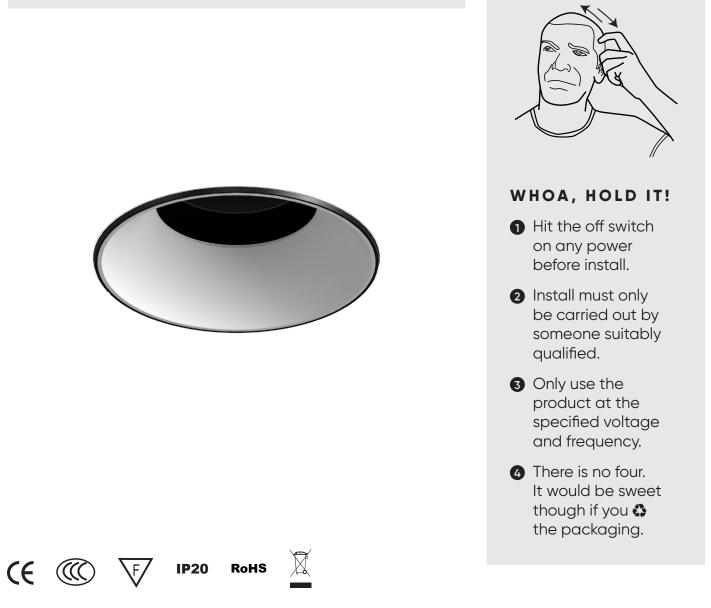


+61 3 9486 3699 sales@ambiencelighting.com.au **ambiencelighting.com.au** 

## 1


Make a hole in the false ceiling as per nominated sizes:

- S: Ø70mm
- M: Ø108mm
- L: Ø132mm
- XL: Ø158mm

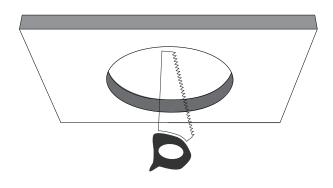

# 2

Remove the packaging from the trimless frame.

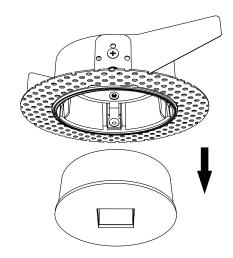


### 3


Fix the Trimless frame on the ceiling by compressing the spring clips.




4


frame.

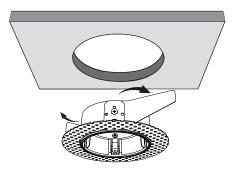

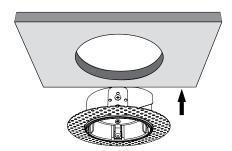

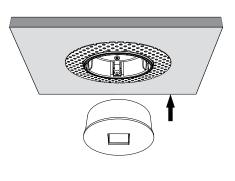

Insert the packaging back into the trimless





### 5

Plaster onto the trimless frame to obtain a neat cut-out.

### 6

Once the frame is nice and flush, remove the packaging.

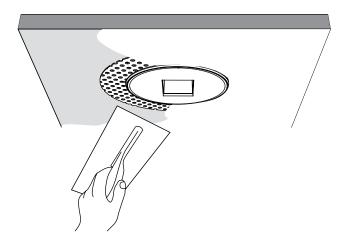

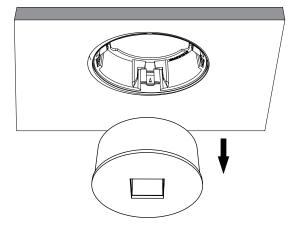



### 7

Position and plug LED driver in ceiling space, like this.

## 8


Connect the LED driver to the fitting.

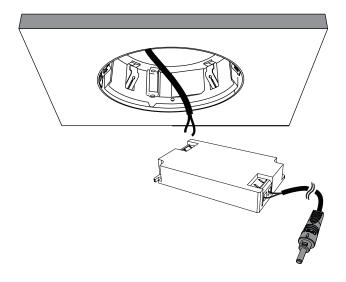

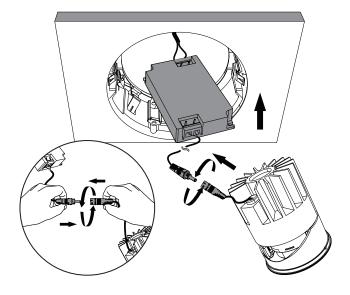

## 9

Push the fitting into the hole until you hear a 'click' sound and until it's fully secured.

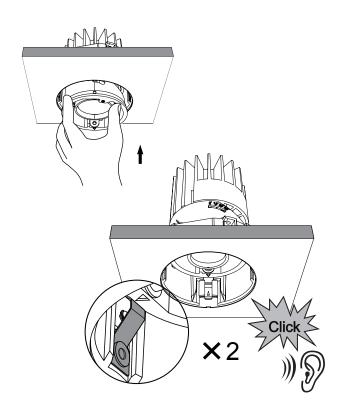


Note: Must use own ears. Ears not supplied.

### 1

Adjust and angle the fitting as required.

#### 10

Insert the secondary reflector back into the fitting.

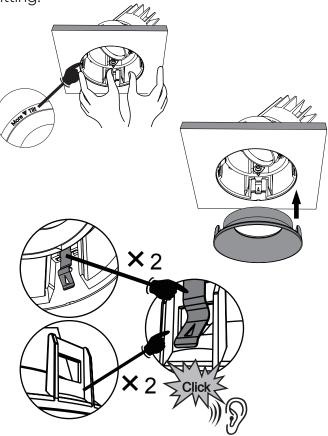



Let loose.

