
INSTALLATION GUIDE


The ABCDEFG Major of installing **symphony**



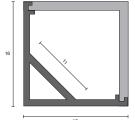

PRELUDE

When concealing the profile without any mounting clips, make sure the rebate has a +0.5mm tolerance to cater for any increase in the width of the profile from powdercoating.

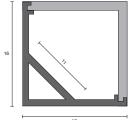

IMPORTANT STUFF

- Please install the profile on a suitable surface.
- This profile can only be surface mounted.
- Please follow our quide, if you don't strange things could happen.
- Ambience is not liable if instructions not followed.
- Tools and screws not included.
- Actual product may vary from the pictures.
- It would be sweet if you 🛟 the packaging.

PLEASE NOTE

Failure to follow installation instructions may void warranty. Please refer to our standard terms and conditions and warranty details: ambiencelighting.com.au



IP20

RoHS







Favourite eyewear is optional.



Locate the mounting clips provided with the profile.

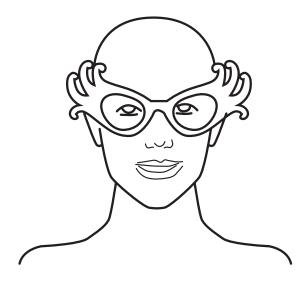

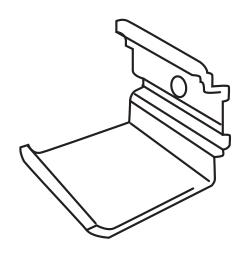



Mount the clips on to the surface with the help of a suitable self-tapping screw. It is recommended to use mounting clips every 750mm.



Insert the profile into the mounting clips.

